

NXT SINGLE BOARD

Low Percentage %

New Come Out

13/6 BUTTON USER'S MANUAL

ZEUS



JUNGLE WILD



PALACE of RICHES II



SAMURAI MASTER



1. ACCOUNTING INFORMATION

[ACCOUNTING INFORMATION]		
	TOTAL	PERIODIC
1. COIN IN	21475 Credits	21475 Credits
2. BILL IN	131300 Credits	131300 Credits
3. KEY IN	22400 Credits	22400 Credits
4. TOTAL IN	175175 Credits	175175 Credits
5. HOPPER OUT	0 Credits	0 Credits
6. KEY OUT	88430 Credits	88430 Credits
7. TICKET OUT	0 Credits	0 Credits
8. TOTAL OUT	88430 Credits	88430 Credits
9. TOTAL IN-OUT	86745 Credits	86745 Credits
10. TOTAL BET	238650 Credits	238650 Credits
11. TOTAL WIN	162655 Credits	162655 Credits
12. PERCENTAGE	68.240097 %	68.240097 %

Bet1 Button Bet2 Button Bet3 Button Bet4 Button Bet5 Button

2. GAME OPTION

[GAME OPTION(Z E U S)]	
1. WIN PERCENT	Type 9 : 68.68%
2. LINE PER BET	Type 2 : (1,2,3,5,10)
3. SET TO DEFAULT	
4. RETURN	

Bet1 Button Bet2 Button Bet3 Button Bet4 Button Bet5 Button

[GAME OPTION(JUNGLE WILD)]	
1. WIN PERCENT	Type 11 : 60.28%
2. LINE PER BET	Type 2 : (1,2,3,5,10)
3. SET TO DEFAULT	
4. RETURN	

Bet1 Button Bet2 Button Bet3 Button Bet4 Button Bet5 Button

[GAME OPTION(PALACE OF RICHES II)]	
1. WIN PERCENT	Type 11 : 59.73%
2. LINE PER BET	Type 2 : (1,2,3,5,10)
3. SET TO DEFAULT	
4. RETURN	


Bet1 Button Bet2 Button Bet3 Button Bet4 Button Bet5 Button

[GAME OPTION(SAMURAI MASTER)]	
1. WIN PERCENT	Type 11 : 59.73%
2. LINE PER BET	Type 2 : (1,2,3,5,10)
3. SET TO DEFAULT	
4. RETURN	

Bet1 Button Bet2 Button Bet3 Button Bet4 Button Bet5 Button

ITEMS	RANGE LIST	DEFAULT VALUE
WIN PERCENT%	1:93.98%, 2:92.20%, 3:90.15%, 4:88.50%, 5:87.10% 6:82.02%, 7:79.54%, 8:73.46%, 9:68.68%	93.98%
LINE PER BET	1:(1,2,3,4,5),2:(1,2,3,5,10),3(1,3,5,7,10),4(1,5,10,20,50), 5(1,10,25,50,100)	1,2,3,5,10
SET TO DEFAULT	TO DEFAULT	
RETURN	TO AUDIT MENU	

Hardware installation

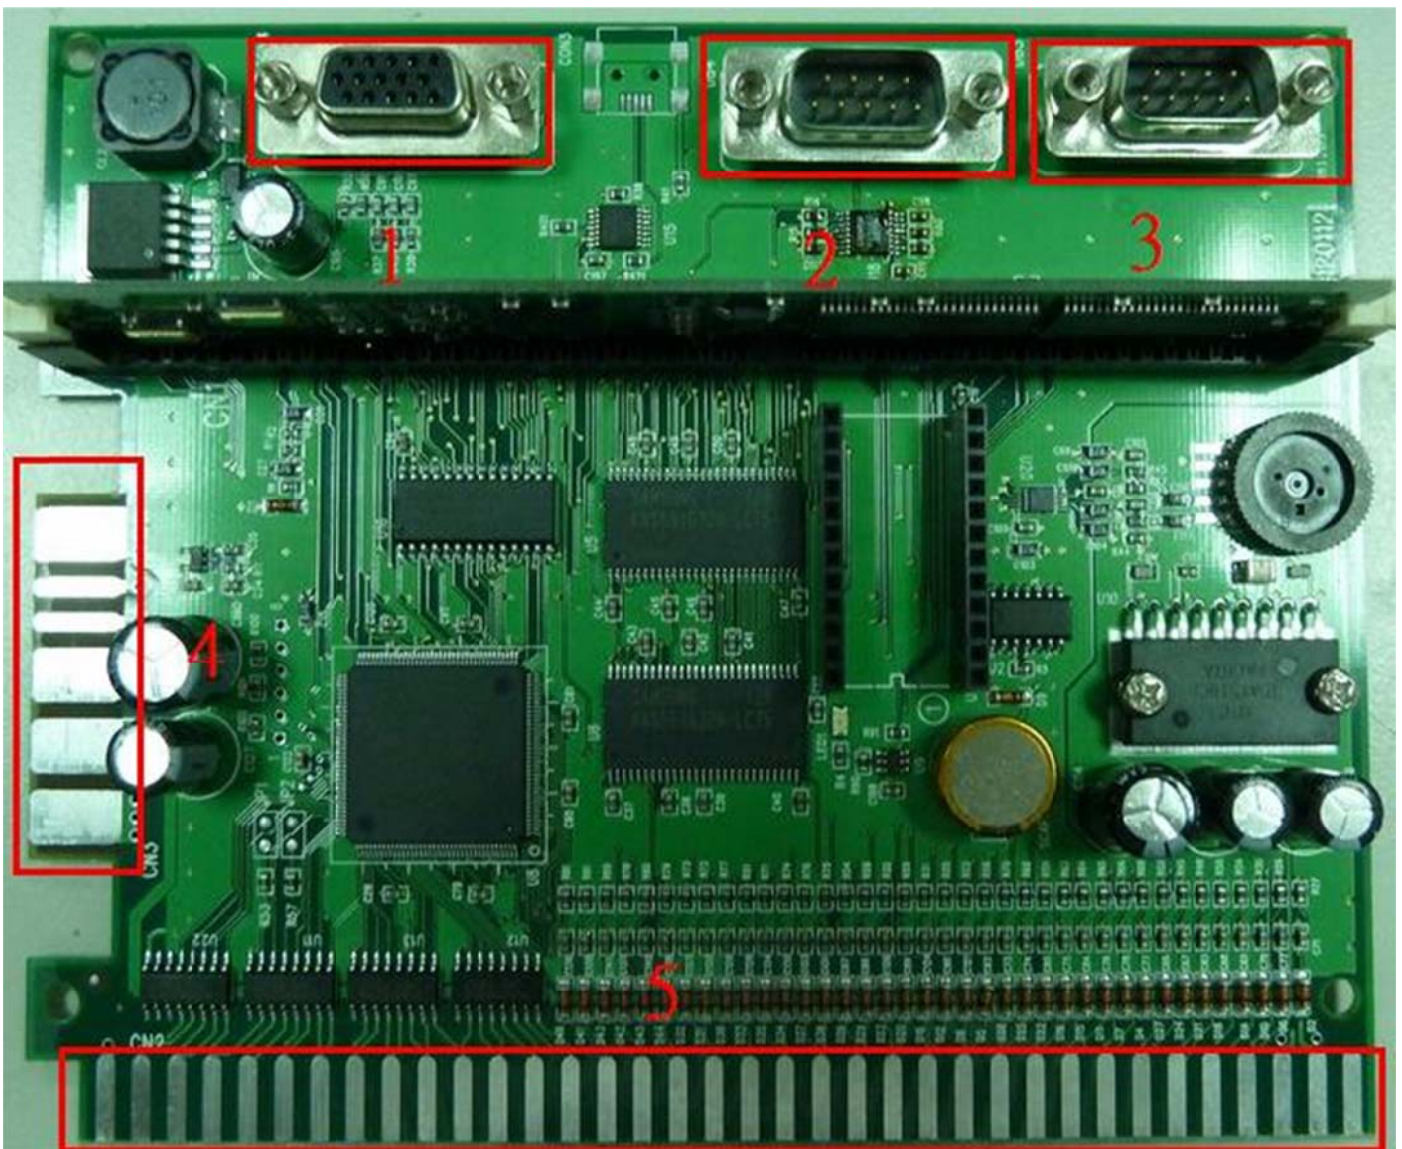

1. Video output connector

2. RS-232 Touch screen connector

3. PRINTER Use only the FUTURE LOGIC PSA-66-ST

4. Please refer to page 15 16 CONNECTOR DIAGRAM

5. Please refer to page 15 16 CONNECTOR DIAGRAM

For 13 BUTTON CONNECTOR DIAGRAM

COMPONENT SIDE			SOLDER SIDE		
		1A	1B		
	RIGHT SPEAKER+	2A	2B	RIGHT SPEAKER-(=GND)	
	LEFT SPEAKER+	3A	3B	LEFT SPEAKER-(=GND)	
IN0	BET BUTTON 1	4A	4B	LINE BUTTON 1	IN1
IN2	BET BUTTON 2	5A	5B	LINE BUTTON 2	IN3
IN4	BET BUTTON 3	6A	6B	LINE BUTTON 3	IN5
IN6	BET BUTTON 4	7A	7B	LINE BUTTON 4	IN7
IN8	BET BUTTON 5	8A	8B	LINE BUTTON 5	IN9
IN10	START BUTTON	9A	9B		IN11
IN12		10A	10B	BILL ACCEPTOR	IN13
IN14		11A	11B		IN15
IN16		12A	12B		IN17
IN18		13A	13B		IN19
IN 20		14A	14B		IN21
IN22	HELP BUTTON	15A	15B		IN23
IN24		16A	16B		IN25
IN26		17A	17B	CREDIT IN KEYSW	IN27
IN28	COIN ACCEPTOR	18A	18B		IN29
IN30		19A	19B		IN31
IN32		20A	20B		IN33
IN34	PAYOUT BUTTON	21A	21B	PAYOUT KEYSW	IN35
IN36	ATTENDANT KEYSW	22A	22B	HOPER COIN SW	IN37
OUT0		23A	23B	COIN ACCEPTOR INHIBIT	OUT1
OUT2		24A	24B	BILL ACCEPTOR INHIBIT	OUT3
OUT4	TOTAL IN COUNTER	25A	25B	LINE LAMP 1	OUT5
OUT6	TOTAL OUT COUNTER	26A	26B	LINE LAMP 2	OUT7
OUT8	TOTAL BET COUNTER	27A	27B	LINE LAMP 3	OUT9
OUT10	TOTAL WIN COUNTER	28A	28B	LINE LAMP 4	OUT11
OUT12	BET LAMP 1	29A	29B	LINE LAMP 5	OUT13
OUT14	BET LAMP 2	30A	30B		OUT15
OUT16	BET LAMP 3	31A	31B	PAYOUT LAMP	OUT17
OUT18	BET LAMP 4	32A	32B		OUT19
OUT20	BET LAMP 5	33A	33B	HOPER MOTOR	OUT21
OUT22	START LAMP	34A	34B	MENU/HELP LAMP	OUT23
OUT24		35A	35B		OUT25
	GND	36A	36B	GND	

COMPONENT SIDE			SOLDER SIDE		
	GND	1A	1B	GND	
	GND	2A	2B	GND	
	+5V	3A	3B	+5V	
	+5V	4A	4B	+5V	
	+12V	5A	5B	+12V	
	+12V	6A	6B	+12V	
		7A	7B		
		8A	8B		
	GND	9A	9B	GND	
	GND	10A	10B	GND	

For 6 BUTTON CONNECTOR DIAGRAM

COMPONENT SIDE			SOLDER SIDE		
		1A	1B		
	RIGHT SPEAKER+	2A	2B	RIGHT SPEAKER-(=GND)	
	LEFT SPEAKER+	3A	3B	LEFT SPEAKER-(=GND)	
IN0	PAYOUT BUTTTON	4A	4B		IN1
IN2	HELP BUTTON	5A	5B		IN3
IN4	LINE BUTTON	6A	6B		IN5
IN6	BET BUTTON	7A	7B		IN7
IN8	MAX BET BUTTON	8A	8B		IN9
IN10	START BUTTON	9A	9B		IN11
IN12		10A	10B	BILL ACCEPTOR	IN13
IN14		11A	11B		IN15
IN16		12A	12B		IN17
IN18		13A	13B		IN19
IN 20		14A	14B		IN21
IN22		15A	15B		IN23
IN24		16A	16B		IN25
IN26		17A	17B	CREDIT IN KEYSW	IN27
IN28	COIN ACCEPTOR	18A	18B		IN29
IN30		19A	19B		IN31
IN32		20A	20B		IN33
IN34		21A	21B	PAYOUT KEYSW	IN35
IN36	ATTENDANT KEYSW	22A	22B	HOPER COIN SW	IN37
OUT0		23A	23B	COIN ACCEPTOR INHIBIT	OUT1
OUT2		24A	24B	BILL ACCEPTOR INHIBIT	OUT3
OUT4	TOTAL IN COUNTER	25A	25B		OUT5
OUT6	TOTAL OUT COUNTER	26A	26B		OUT7
OUT8	TOTAL BET COUNTER	27A	27B		OUT9
OUT10	TOTAL WIN COUNTER	28A	28B		OUT11
OUT12	PAYOUT LAMP	29A	29B		OUT13
OUT14	HELP LAMP	30A	30B		OUT15
OUT16	LINE LAMP	31A	31B		OUT17
OUT18	BET LAMP	32A	32B		OUT19
OUT20	MAX BET LAMP	33A	33B	HOPER MOTOR	OUT21
OUT22	START LAMP	34A	34B		OUT23
OUT24		35A	35B		OUT25
	GND	36A	36B	GND	

COMPONENT SIDE			SOLDER SIDE		
	GND	1A	1B	GND	
	GND	2A	2B	GND	
	+5V	3A	3B	+5V	
	+5V	4A	4B	+5V	
	+12V	5A	5B	+12V	
	+12V	6A	6B	+12V	
		7A	7B		
		8A	8B		
	GND	9A	9B	GND	
	GND	10A	10B	GND	